


**RYOBI
BISCUIT JOINER
MODEL NUMBER JM83
REPAIR SHEET**

ONE WORLD TECHNOLOGIES, INC.

1428 Pearman Dairy Road, Anderson, SC 29625 • Phone 1-800-525-2579
États-Unis, Téléphone 1-800-525-2579 • USA, Teléfono 1-800-525-2579

www.ryobitools.com

RYOBI BISCUIT JOINER – MODEL NUMBER JM83

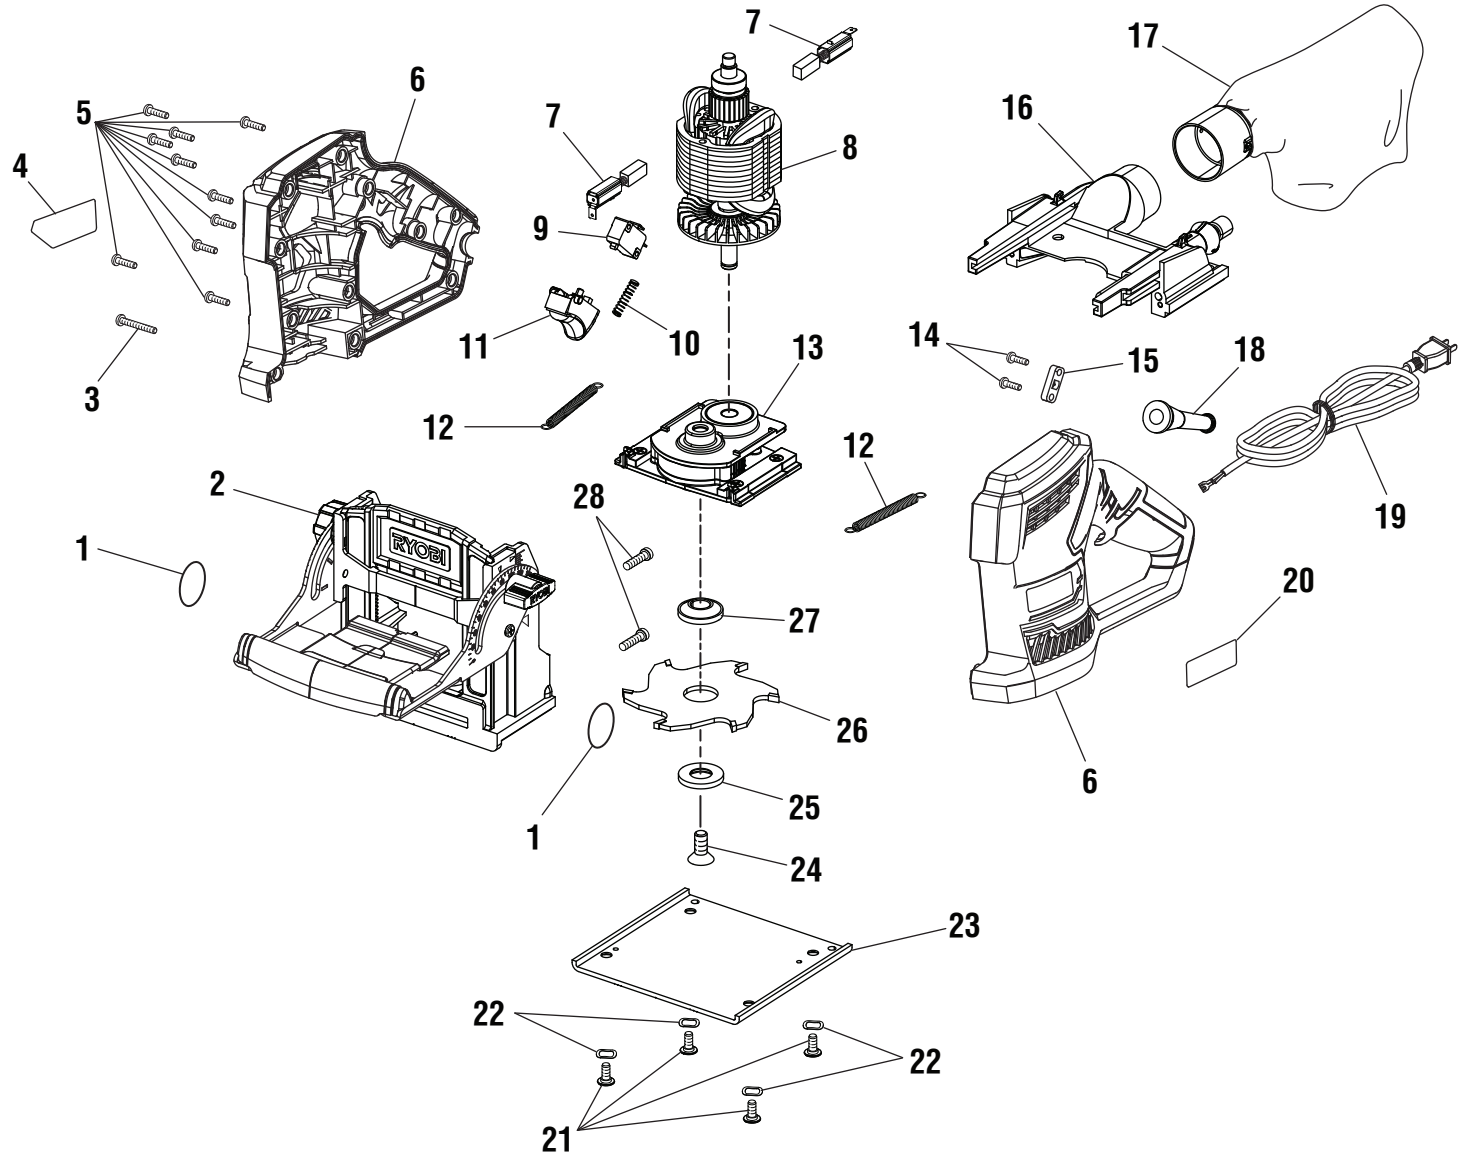


RYOBI BISCUIT JOINER – MODEL NUMBER JM83

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **BISCUIT JOINER** or when ordering repair parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY	KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	039846001075	Warning Label	2	17	039840001108	Dust Bag Assembly.....	1
2	039840001105	Fence and Height Adjustment Assembly (Inc. Key No. 1).....	1	18	039846001029	Bend Relief.....	1
3	039846001018	Screw (M4 x 30 mm)	1	19	039846001067	Power Cord.....	1
4	039846001066	Data Icon Label.....	1	20	039846001065	Logo Label.....	1
5	039846001019	Screw (M4 x 16 mm)	10	21	039846001064	Screw (M5 x 10 mm).....	4
6	039846001110	Motor Housing (Inc. Key Nos. 4 and 20).....	1	22	039846001063	Washer	4
7	039846001026	Brush Assembly	2	23	039846001062	Base	1
8	039840001103	Motor Assembly.....	1	24	039846001061	Screw (M8 x 20 mm).....	1
9	039846001025	Switch	1	25	039846001060	Blade Lock Washer.....	1
10	039846001022	Compression Spring	1	26	039846001059	Blade.....	1
11	039846001021	Switch Trigger	1	27	039846001058	Blade Washer.....	1
12	039846001041	Tension Spring	1	28	039846001016	Screw (M5 x 18 mm).....	2
13	039840001104	Gear Box Assembly	1	29	039846001014	Knob.....	1
14	039846001027	Screw (M4 x 14 mm).....	2	Not Shown:			
15	039846001028	Cord Clamp.....	1	039846001073	Tool Bag (Green)		
16	039840001106	Depth Rod Assembly	1	039846001074	#10 Biscuit Accessory Kit		
				995000014	Operator's Manual (961152746)		
				2-13-17			
				(Rev:01)			

RYOBI BISCUIT JOINER – MODEL NUMBER JM83

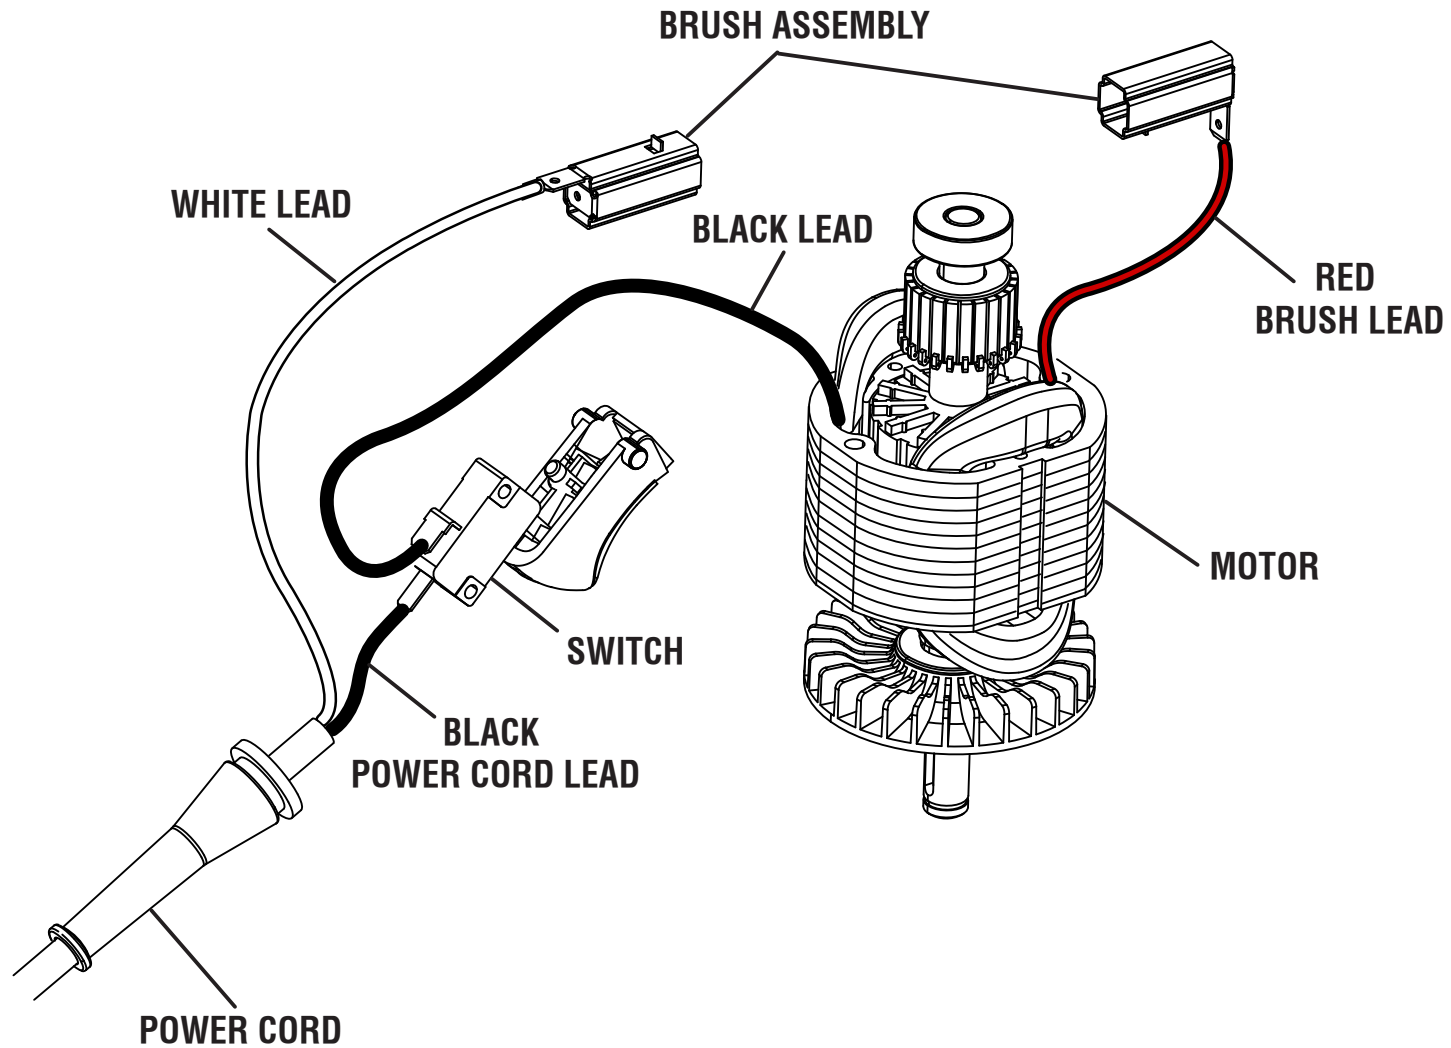

WIRING DIAGRAM